



Instructions for using the Smart-Pot timer with the SMART POUR™ feature

The Smart-Pour™ alarm feature comes deactivated from the factory. To activate Smart-Pour™ simply press and hold the START/RESET button for approximately 7 seconds (the indent on the TOP of the timer). During this time, the LED lights will flash in a patterned sequence. When all the LED's have stopped flashing, the Smart-Pour™ feature will be activated.

To test if it is activated, simply tilt the decanter in a forward or pouring motion. If activated, the Red LED will flash rapidly and the Beeper will sound when the decanter is tilted at a 37-degree angle. To de-activate, repeat the procedure of holding the START/RESET button.

To START the timer, simply touch the indent on the TOP of the timer (the START/RESET button). Activate the timer at the same time as a new Brew cycle on the brewing machine. To STOP the timer, briefly press and release the START/RESET button, once the LED lights have stopped flashing the timer is now in WAIT mode.

LED indicators

Flashing **AMBER** light
Timer is in Brew cycle

Flashing **GREEN** light
Timer in Holding or Freshness cycle

Toggle flashing **GREEN** and **RED** lights
Timer in pre-expiry warning cycle and about to Expire

Flashing **RED** light and beeping
Timer in Expiry cycle